


Tent Pegs with Ropes

Set of 4 steel pegs with ropes for additional anchoring of the tent roof

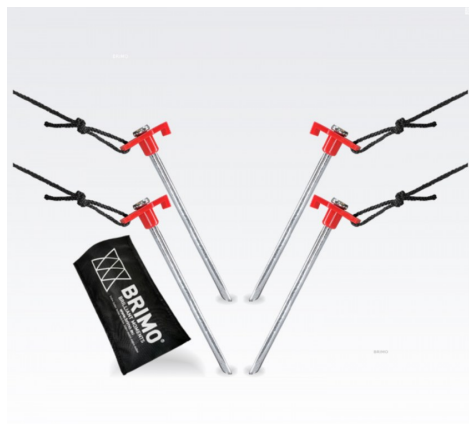

4 steel pegs with ropes and bag

A set of 4 steel pegs with ropes for additional anchoring of your tent. The ropes are tied to the rings sewn into the corners of the roof. They are a secondary anchoring – the main anchoring are the pegs included with the tent (or weights on hard surfaces).

Contents	4 steel pegs with ropes
Peg length	approx. 24-25 cm
Rope length	approx. 3 m
Wind	for wind up to 40 km/h
Fastening	to the rings in the roof corners

Package contents

- 4 steel pegs with attached ropes
- 1 storage bag

Installation and use

- 1 Set up the tent**
Open, lock and anchor the tent at its final position.
- 2 Tie the rope**
Tie the free end of each rope to the ring in one roof corner with a secure knot.
- 3 Lead the rope out**
Pull the rope outwards diagonally from the corner, in line with the roof diagonal.
- 4 Drive in the peg**
Drive the peg fully into the ground at an angle of about 45°, with the top leaning away from the tent. Use a rubber mallet.
- 5 Tension**
Tension all 4 ropes evenly so that the tent stands straight and is not pulled to one side.



Rope tied to the roof corner ring

Safety instructions

For this product

- Before driving in the pegs, make sure there are no underground cables, gas or water pipes.
- Ropes and pegs are a tripping hazard – mark them clearly, especially in public areas and in the dark.
- The ropes are designed for wind up to 40 km/h. Above that, take the tent down.
- Wear gloves when driving in or pulling out pegs. Do not leave any pegs in the ground after use.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Clean the pegs and let the ropes dry before storing them in the bag.
- Replace bent pegs and worn ropes.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.