

Water Weight Bags

20-litre PVC water bags for anchoring folding tents on hard surfaces



Water bag fastened to a tent leg

Weather-resistant black PVC bags for places where you cannot use pegs or ropes. The empty bags are light and compact – you fill them with water directly at the tent. A filled bag weighs about 20 kg.

Volume	20 litres
Weight filled	approx. 20 kg per bag
Material	weather-resistant PVC, welded and sewn seams
Cap	screw cap with sealing membrane
Sets	4 or 6 pieces

Package contents

- Empty water bags according to the ordered set (4 or 6 pieces)

Installation and use

- 1 Place the empty bag**
Put the empty bag on the foot plate next to the tent leg.
- 2 Fasten**
Wrap all Velcro straps around the leg and press them firmly together.
- 3 Fill with water**
Open the cap and fill the bag with water using a hose or a funnel – up to 20 litres.
- 4 Close**
Screw the cap on tightly and check that no water leaks.
- 5 Empty after use**
Open the cap and let the water drain away from the tent, people and electrical devices.



20-litre filling cap with sealing membrane

Safety instructions

For this product

- Fill the bags on site – a filled bag weighs about 20 kg and is hard to carry.
- Do not use the bags in frost. Empty them when temperatures fall below 0 °C – freezing water can burst the bag.
- Do not use hot water or chemicals. The water is not drinkable.
- Spilled water can make the ground slippery. Bags at the legs can be a tripping hazard.
- Water bags increase stability but do not make a tent storm-proof. Take the tent down in strong wind.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Empty completely after use and let the bags dry with the cap open before storing.
- Store away from direct sunlight, frost and sharp objects.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.